Register your product and get support at

www.philips.com/support

55PFL4709
50PFL4709
49PFL4709
40PFL4709
40PFL4409
32PFL4509
28PFL4509

EN User Manual

To obtain a more detailed Electronic Copy of this Manual, go to *www.philips.com/support*

ES Manual del Usuario

Para obtener una Copia Electrónica más detallada de este Manual, visite *www.philips.com/support*

EN **For further assistance, call the customer support service in your country.**

- To obtain assistance, contact Philips Customer Care Center;
  México D.F. and Área Metropolitana; **58 87 97 36**
  Interior de la Republica; **01 800 839 19 89**
  Colombia; **01 800 952 0640**
  Costa Rica; **0800 052 1564**
  Guatemala; **1 800 835 0351**
  El Salvador; **1 800 6141**
  Honduras; **01 800 122 6276**
  Panamá; **800 052 1372**
  Venezuela; **01 800 100 5399**

ES **Para obtener más información, llame al servicio de soporte al cliente de su país.**

- Para obtener asistencia, póngase en contacto con el CENTRO DE INFORMACION AL CLIENTE,
  México D.F. y Área Metropolitana;**58 87 97 36**
  Interior de la Republica; **01 800 839 19 89**
  Colombia; **01 800 952 0640**
  Costa Rica; **0800 052 1564**
  Guatemala; **1 800 835 0351**
  El Salvador; **1 800 6141**
  Honduras; **01 800 122 6276**
  Panamá; **800 052 1372**
  Venezuela; **01 800 100 5399**

PHILIPS

Know these ***safety*** *symbols*

CAUTION
RISK OF ELECTRIC SHOCK
DO NOT OPEN
CAUTION: TO REDUCE THE RISK OF ELECTRIC SHOCK, DO NOT REMOVE COVER (OR BACK). NO USER-SERVICEABLE PARTS INSIDE. REFER SERVICING TO QUALIFIED SERVICE PERSONNEL.

The caution marking is located on the rear or bottom of the cabinet.

The lightning flash with arrowhead symbol, within an equilateral triangle, is intended to alert the user to the presence of uninsulated "dangerous voltage" within the apparatus's enclosure that may be of sufficient magnitude to constitute a risk of electric shock to persons.

The exclamation point within an equilateral triangle is intended to alert the user to the presence of important operating and maintenance (servicing) instructions in the literature accompanying the apparatus.

WARNING: To reduce the risk of fire or electric shock, do not expose this apparatus to rain or moisture. Apparatus shall not be exposed to dripping or splashing and no objects filled with liquids, such as vases, shall be placed on the apparatus.

CAUTION: To prevent electric shock, match wide blade of plug to wide slot, fully insert.

ATTENTION: Pour éviter les choc électriques,introduire la lame la plus large de la fiche dans la borne correspondante de la prise et pousser jusqu'au fond.

PHILIPS *Visit our World Wide Web Site at www.philips.com/support*

CHILD SAFETY:

PROPER TELEVISION PLACEMENT MATTERS

THE CONSUMER ELECTRONICS INDUSTRY CARES

- Manufacturers, retailers and the rest of the consumer electronics industry are committed to making home entertainment safe and enjoyable.
- As you enjoy your television, please note that all televisions – new and old- must be supported on proper stands or installed according to the manufacturer's recommendations. Televisions that are inappropriately situated on dressers, bookcases, shelves, desks, speakers, chests, carts, etc., may fall over, resulting in injury.

TUNE IN TO SAFETY

- **ALWAYS** follow the manufacturer's recommendations for the safe installation of your television.
- **ALWAYS** read and follow all instructions for proper use of your television.
- **NEVER** allow children to climb on or play on the television or the furniture on which the television is placed.
- **NEVER** place the television on furniture that can easily be used as steps, such as a chest of drawers.
- **ALWAYS** install the television where it cannot be pushed, pulled over or knocked down.
- **ALWAYS** route cords and cables connected to the television so that they cannot be tripped over, pulled or grabbed.

CE.org/safety CEA Consumer Electronics Association

WALL OR CEILING MOUNT YOUR TELEVISION

- **ALWAYS** contact your retailer about professional installation if you have any doubts about your ability to safely mount your television.
- **ALWAYS** use a mount that has been recommended by the television manufacturer and has a safety certification by an independent laboratory (such as UL, CSA, ETL).
- **ALWAYS** follow all instructions supplied by the television and mount manufacturers.
- **ALWAYS** make sure that the wall or ceiling where you are mounting the television is appropriate. Some mounts are not designed to be mounted to walls and ceilings with steel studs or cinder block construction. If you are unsure, contact a professional installer.
- Televisions can be heavy. A minimum of two people is required for a wall or ceiling mount installation.

MOVING AN OLDER TELEVISION TO A NEW PLACE IN YOUR HOME

- Many new television buyers move their older CRT televisions into a secondary room after the purchase of a flat-panel television. Special care should be made in the placement of older CRT televisions.
- **ALWAYS** place your older CRT television on furniture that is sturdy and appropriate for its size and weight.
- **NEVER** place your older CRT television on a dresser where children may be tempted to use the drawers to climb.
- **ALWAYS** make sure your older CRT television does not hang over the edge of your furniture.

Important Safety Instructions

1. Read these instructions.
2. Keep these instructions.
3. Heed all warnings.
4. Follow all instructions.
5. Do not use this apparatus near water.
6. Clean only with dry cloth.
7. Do not block any ventilation openings. Install in accordance with the manufacturer's instructions.
8. Do not install near any heat sources such as radiators, heat registers, stoves, or other apparatus (including amplifiers) that produce heat.
9. Do not defeat the safety purpose of the polarized or grounding type plug. A polarized plug has two blades with one wider than the other. A grounding type plug has two blades and a third grounding prong. The wide blade or the third prong are provided for your safety. If the provided plug does not fit into your outlet, consult an electrician for replacement of the obsolete outlet.
10. Protect the power cord from being walked on or pinched particularly at plugs, convenience receptacles, and the point where they exit from the apparatus.
11. Only use attachments / accessories specified by the manufacturer.
12. Use only with the cart, stand, tripod, bracket, or table specified by the manufacturer, or sold with the apparatus. When a cart is used, use caution when moving the cart / apparatus combination to avoid injury from tip-over.

13. Unplug this apparatus during lightning storms or when unused for long periods of time.
14. Refer all servicing to qualified service personnel. Servicing is required when the apparatus has been damaged in any way, such as power-supply cord or plug is damaged, liquid has been spilled or objects have fallen into the apparatus, the apparatus has been exposed to rain or moisture, does not operate normally, or has been dropped.

Note to the CATV system installer:

This reminder is provided to call the CATV system installer's attention to Article 820-40 of the NEC that provides guidelines for proper grounding and, in particular, specifies that the cable ground shall be connected to the grounding system of the building, as close to the point of cable entry as practical.

Example of Antenna Grounding as per NEC - National Electric Code

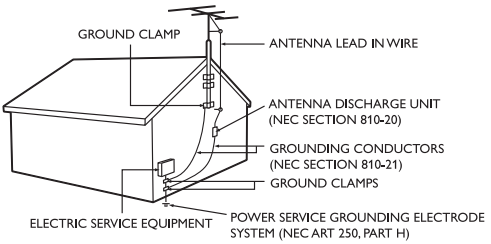
GROUND CLAMP
ANTENNA LEAD IN WIRE
ANTENNA DISCHARGE UNIT (NEC SECTION 810-20)
GROUNDING CONDUCTORS (NEC SECTION 810-21)
GROUND CLAMPS
ELECTRIC SERVICE EQUIPMENT
POWER SERVICE GROUNDING ELECTRODE SYSTEM (NEC ART 250, PART H)

Wall Mount Bracket Kit

	Brand	Model #	Screw dimension
55PFL4709 / 50PFL4709 / 49PFL4709	SANUS	PLA50B	M6 x 0.472" (12mm)
40PFL4709 / 40PFL4409	SANUS	SAN25BB	M4 x 0.472" (12mm)
32PFL4509 / 28PFL4509	SANUS	SAN18B	M4 x 0.472" (12mm)

- The recommended Wall Mount Bracket Kit (sold separately) allows the mounting of the TV on the wall.
- For detailed information on installing the wall mount, refer to the Wall Mount Instruction Book.
- P&F Mexicana is not responsible for any damage to the product or injury to yourself or others if you elect to install the TV Wall Mount Bracket or mount the TV onto the Bracket on your own.
- The Wall Mount Bracket must be installed by experts.

P&F Mexicana is not liable for these types of accidents or injury noted below.

- Install the Wall Mount Bracket on a sturdy vertical wall.
- If installed onto a ceiling or slanted wall, the TV and Wall Mount Bracket may fall which could result in a severe injury.
- Do not use screws that are longer or shorter than their specified length. If screws too long are used this may cause mechanical or electrical damage inside the TV set. If screws too short are used this may cause the TV set to fall.
- Do not fasten the screws by excessive force. This may damage the product or cause the product to fall, leading to an injury.
- For safety reasons use 2 people to mount the TV onto a Wall Mounting Bracket.
- Do not mount the TV onto the Wall Mounting Bracket while your TV is plugged in or Turned On. It may result in an electrical shock injury.

When installing the unit on the wall, allow this much space.

Top:	11.8 inches (30cm)
Left and right side:	5.9 inches (15cm)
Bottom:	3.9 inches (10cm)

1 Notice

Trademarks are the property of Koninklijke Philips N.V. or their respective owners.

P&F Mexicana reserves the right to change products at any time without being obliged to adjust earlier supplies accordingly.

The material in this manual is believed adequate for the intended use of the system. If the product or its individual modules or procedures are used for purposes other than those specified herein, confirmation of their validity and suitability must be obtained. P&F Mexicana warrants that the material itself does not infringe any United States patents. No further warranty is expressed or implied.

P&F Mexicana cannot be held responsible neither for any errors in the content of this document nor for any problems as a result of the content in this document. Errors reported to P&F Mexicana will be adapted and published on the P&F Mexicana support website as soon as possible.

Pixel characteristics

This LCD product has a high number of color pixels. Although it has effective pixels of 99.999% or more, black dots or bright points of light (red, green or blue) may appear constantly on the screen. This is a structural property of the display (within common industry standards) and is not a malfunction.

Warranty

No components are user serviceable. Do not open or remove covers to the inside of the product. Repairs may only be done by Service Centers and official repair shops. Failure to do so shall void any warranty, stated or implied.

Any operation expressly prohibited in this manual, any adjustments or assembly procedures not recommended or authorized in this manual shall void the warranty.

Copyright

All other registered and unregistered trademarks are the property of their respective owners.

The terms HDMI and HDMI High-Definition Multimedia Interface, and the HDMI Logo are trademarks or registered trademarks of HDMI Licensing LLC in the United States and other countries.

Manufactured under license from Dolby Laboratories. Dolby and the double-D symbol are trademarks of Dolby Laboratories.

For DTS patents, see http://patents.dts.com.

Manufactured under license from DTS Licensing Limited. DTS, the Symbol, & DTS and the Symbol together are registered trademarks, and DTS TruSurround is a trademark of DTS, Inc. © DTS, Inc. All Rights Reserved.

LED backlighting technology uses less energy when compared with a standard CCFL backlighting LCD television of the same screen size. Actual energy savings will vary depending on the screen size.

Portions of this software are copyright © The FreeType Project (www.freetype.org).

The American Academy of Pediatrics discourages television viewing for children younger than two years of age.

2 Important

Positioning the TV

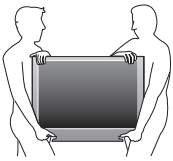

- Large screen TVs are heavy. 2 people are required to carry and handle a large screen TV.
- Make sure to hold the upper and bottom frames of the Unit firmly as illustrated.
- Install the Unit in a horizontal and stable position.
- Do not install the Unit in direct sunlight or in a place subject to dust or strong vibration.
- Depending on the environment, the temperature of this Unit may increase slightly. This is not a malfunction.
- Avoid a place with drastic temperature changes.
- Do not place anything directly on top or bottom of the Unit.
- Depending on your external devices, noise or disturbance of the picture and / or sound may be generated if the Unit is placed too close to them. In this case, please ensure enough space between the external devices and the Unit.
- Do not insert the AC power cord into the power socket outlet before all the connections are made.
- Ensure that you always have easy access to the AC power cord or plug to disconnect the TV from the power.
- Before you move the TV, disconnect attached cables to prevent damage to connectors.
- Be sure to unplug the AC power cord from the AC outlet before moving or carrying the Unit.

Regulatory Notices

Do not place the Unit on the furniture that is capable of being tilted by a child and an adult leaning, pulling, standing or climbing on it. A falling Unit can cause serious injury or even death.

This apparatus should not be placed in a built-in installation such as a bookcase or rack unless proper ventilation is provided.

Make sure to leave a space of 4 inches (10cm) or more around this apparatus.

Press ⏻ to turn the Unit on and go into standby mode.

To completely turn off the Unit, you must unplug the AC power cord.

Disconnect the AC plug to shut the Unit off when trouble is found or not in use. The AC plug shall remain readily available.

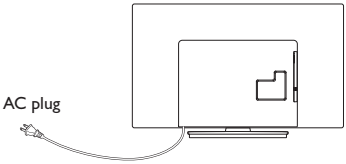

Never use a gas duster on this TV.

The gas trapped inside of this Unit may cause ignition and explosion.

CAUTION: Danger of explosion if battery is incorrectly replaced. Replace only with the same or equivalent type.

WARNING: Batteries (battery pack or battery installed) shall not be exposed to excessive heat such as sunshine, fire or the like.

WARNING: To prevent injury, this apparatus must be securely attached to the furniture / wall in accordance with the instructions. Tipping, shaking or rocking the unit may cause injury / death.

Environmental Care

The packaging of this product is intended to be recycled.

Contact your local authorities for information about how to recycle the packaging.

For product recycling information, please visit - ***www.recycle.philips.com***

End of Life Directives

Philips pays a lot of attention to produce environmental-friendly products in green focal areas. Your new TV contains materials which can be recycled and reused. At the end of its life, specialized companies can dismantle the discarded TV to concentrate the reusable materials and to minimize the amount of materials to be disposed of. Please ensure you dispose of your old TV according to local regulations.

Disposal of Used Batteries

The Batteries supplied do not contain the heavy metals mercury and cadmium. Nevertheless, in many areas Batteries may not be disposed of with your household waste. Please ensure you dispose of Batteries according to local Regulations.

Downloading an Electronic Copy

To obtain a more detailed electronic copy of this manual :

1. Point your browser to : ***www.philips.com/support***
2. Choose your country of location with language.
3. Enter the product name or number in the search field. Alternatively, you can browse the catalog.
4. Click the Description or Model.
5. Under Product support, click "User manual".

Preparing to Move/Ship the Unit

Please pack the Unit properly by following the Diagram on the Carton.

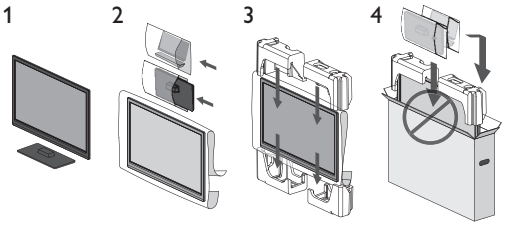

⚠ To avoid damage to the Screen, do not pack the stand on the same side as the TV screen.

English

Contents

1 Notice 4

2 Important 5
- Positioning the TV 5
- Regulatory Notices 5
- Environmental Care 5
- Downloading an Electronic Copy 5
- Preparing to Move/Ship the Unit 5

3 Getting Started 6
- Connecting Antenna or Cable / Satellite / IPTV Box 6

4 Use your TV 7
- Watching Channels from an External Device 7
- Switching Audio Mode 7
- Changing Picture and Sound Settings 7
- Changing Picture Format 8
- Caption Settings 9
- Child and Ratings Lock 9
- Setting your Location to Home 10
- Viewing Photos and Videos on a USB Memory Stick 10

5 Install Channels 10
- Autoprogram 10

6 Troubleshooting 11

7 Specifications 12

3 Getting Started

Connecting Antenna or Cable / Satellite / IPTV Box

Be sure your Antenna or another Device is connected properly before plugging in the AC Power Cord.

If connecting to an Antenna through an RF cable

Any DTV Programs that are Broadcast in your area can be received for free through an Antenna Connection.

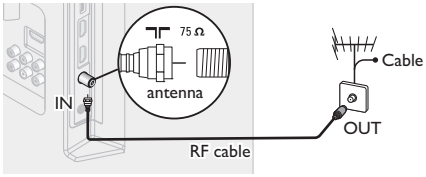

If you connect a Set-top Box through an RF cable

If the TV is connected to a Cable / Satellite Set-top Box via a Coaxial Connection, set the TV to channel 3/4 or the channel specified by the service provider.

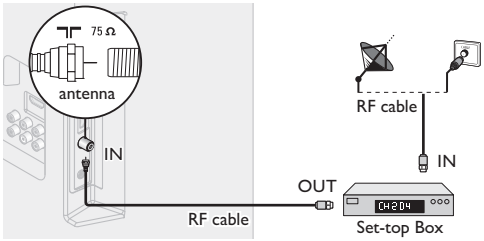

If connecting Cable / Satellite / IPTV Box using an HDMI cable

If the TV is connected to a Cable / Satellite Set-top Box via an HDMI cable, make sure you select the correct Source by using **SOURCE** key on TV or **SOURCE** key on Remote Control.

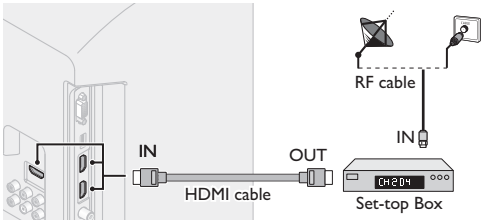

Note(s)

- If there is no Input signal and no operation for 15 minutes, the Unit will turn Off automatically.

4 Use your TV

Watching Channels from an External Device

1 Turn On the Set-top Box or the Connected Device.
- The picture from the Set-top Box or the Connected Device might appear Automatically on the TV screen.

If the picture does not appear

① Press **SOURCE** repeatedly to select the Set-top Box or the connected device and wait a few seconds till the Picture appears.
② Use the Remote Control for the Set-top Box or the Connected Device to select Channels to view.

Switching Audio Mode

Digital TV Operation

1 Press **SAP** to display the currently selected Language and the number of available Languages.
2 Press **SAP** Repeatedly to cycle through the available Audio Languages.

Note(s)

- Available Languages differ depending on the Broadcast.
- **Other** is displayed when the Audio Language cannot be acquired or the acquired Languages are other than English, French or Spanish.

Cable / NTSC (Analog) TV Operation

1 Press **SAP** to display the currently selected Audio mode.
2 While receiving an MTS broadcast, press **SAP** Repeatedly to cycle through the available Audio Channels.

Changing Picture and Sound Settings

You must set **Home** in **Location**. ➡ p. 10
Otherwise, personalized Picture and Sound settings will not be memorized after the Unit goes into Standby Mode.

Changing Picture Settings

1 Press ⌂ and use ▲▼ to select **Picture**, then press **OK**.

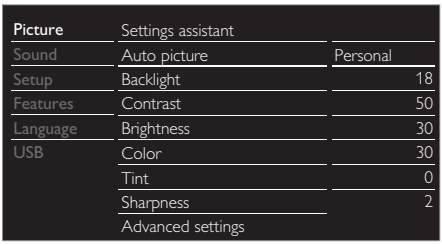

2 Use ▲▼◀▶ to select the item you want to adjust, then press **OK**.

Settings assistant	to guide you through the best picture setting	
Auto picture	to select the desired Setting, then press **OK** (**Personal**, **Standard**, **Vivid**, **Sports**, **Movie**, **Game** and **Eco**)	
	◀ Cursor	Cursor ▶
Backlight	to Reduce Power Consumption and Brightness	to Increase Power Consumption and Brightness
Contrast	to Decrease Contrast	to Increase Contrast
Brightness	to Decrease Brightness	to Increase Brightness
Color	to Decrease Color Intensity	to Increase Color Intensity
Tint	to Add Red	to Add Green
Sharpness	to Soften	to Sharpen
Advanced settings	to Select the desired Setting, then press **OK** (**Color alignment**, **Noise reduction**, **Ambient light sensor***, **Black stretch**, **Dynamic contrast**, **Gamma**, **120 PMR*** and **Film mode***)	

Note(s)

- Adjusts Backlight for the Best Picture Quality by Dynamically Adjusting the Backlight Intensity in accordance with the Room Lighting Condition when **Ambient light sensor*** is Set to **On**. Please ensure the Room Lighting is Stable and the Light Sensor is Not Blocked.

* Not available for 32PFL4509, 28PFL4509.

English

Continued on next page.

Changing Sound Settings

1 Press ⌂ and use ▲▼ to select **Sound**, then press **OK**.

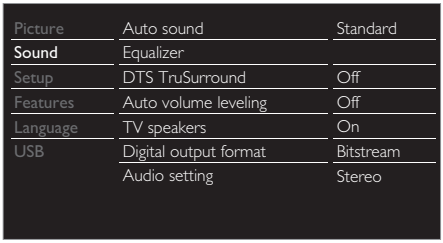

2 Use ▲▼◀▶ to select the item you want to adjust, then press **OK**.

Auto sound	to select the desired Setting, then press **OK**. (**Personal**, **Standard**, **Vivid**, **Sports**, **Movie**, **Music** and **News**)	
Equalizer	to select the specific frequency and use ▲▼ to Adjust the Level, then press **OK**.	
DTS TruSurround	**Off**	to set DTS TruSurround™ to **Off**
	On	to set DTS TruSurround™ to **On**
Auto volume leveling	**Off**	to Remove the **Auto volume leveling**
	On	to Reduce Volume Differences between the TV Commercials and the Programs
TV speakers	**On**	to Output Sound from the Unit's Speakers
	Off	No Output Sound from the Unit's Speakers
	Speakers EasyLink	to control Audio Output from your connected HDMI Link devices
Digital output format	**Bitstream**	to Output Audio in its native format as Bitstream to connected Audio receiver.
	PCM	to Output PCM format.
Audio setting	**Stereo**	to Output Stereo Audio
	Mono	to Output Mono Audio
	SAP	to Output Second Audio Program

Changing Picture Format

Display Modes can be Selected when your TV receives a 16:9 or 4:3 Video Signal.

Three types of Display Modes can be Selected for a PC Input Signal.

Press **FORMAT** Repeatedly to Switch the TV Aspect Ratio.

For 16:9 Video signal

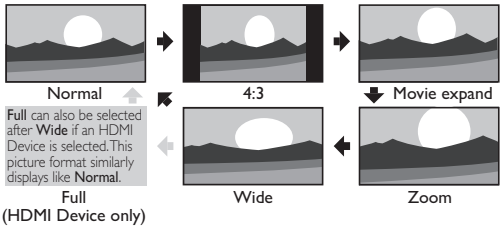

Normal	Original size.
4:3	Shortened horizontally. Sidebars appear on both edges of the screen.
Movie expand	Vertically stretched to fill the screen. This only crops out the top of the picture.
Zoom	Maximum size without changing its horizontal and vertical ratio.
Wide	Horizontally stretched picture. This crops out the left and right sides of the picture.

For 4:3 Video signal

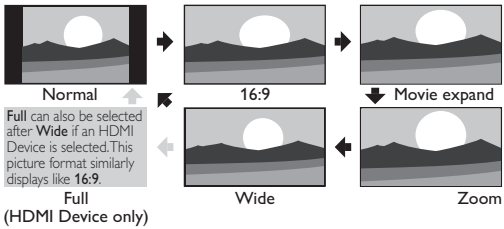

Normal	Original size. Sidebars appear on both edges of the screen.
16:9	Stretched horizontally to fill the screen.
Movie expand	Stretched more vertically at the top of the screen. This crops out the top of the picture.
Zoom	Maximum size that is more vertically stretched to fill the screen. This crops out the top and bottom of the picture.
Wide	Original size and the edges stretched horizontally to fill the screen.

For PC Input signal

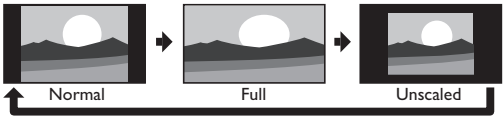

- This Unit can also be connected to your PC that has a DVI Terminal. Use an HDMI-DVI Conversion Cable for this Video Connection and it requires a Stereo Mini 3.5mm Plug Audio Cable for Analog Audio signal as well.
- Refer to 16:9 Video Signal on this page if the PC has an HDMI Output.

Normal	Proportionately stretched picture. Sidebars appear on both edges of the screen.
Full	Stretched out of proportion to fill the screen.
Unscaled	Original size.

Caption Settings

Closed Captions displays the Audio portion of the Program as Superimposed Text over the Video.

1 Press ⌂ and use ▲▼ to select **Features**, then press **OK**.
2 Use ▲▼ to Select **Caption settings**, then press **OK**.

Digital TV Operation

Digital caption service

3 Use ▲▼ to Select **Digital caption service**, then press **OK**.
4 Use ▲▼ to Select the desired **Digital caption service**, then press **OK**.

CS-1 to **CS-6**	Select one of these before changing any other item in **Caption settings** menu. Choose **CS-1** under normal conditions.

Cable / NTSC (Analog) TV Operation

Caption service

3 Use ▲▼ to Select **Caption service**, then press **OK**.
4 Use ▲▼ to Select the desired **Caption service**, then press **OK**.

CC-1 and **T-1**	The primary Closed Captions and Text Services. The Closed Captions or Text is Displayed in the same Language as the Program's Dialog (up to 4 lines of script on the TV Screen).	
CC-3 and **T-3**	Serve as the preferred Data Channels. The Closed Captions or Text is often a Secondary Language.	
CC-2, **CC-4**, **T-2** and **T-4**	Rarely available and Broadcasters use them only in Special conditions, such as when **CC-1** and **CC-3** or **T-1** and **T-3** are Not available. • There are 3 Display modes according to Programs:	
	Paint-on	Displays Characters on the TV screen immediately.
	Pop-on	Once Characters are Stored in Memory, they are Displayed All at Once.
	Roll-up	Displays the Characters Continuously by Scrolling (max. 4 lines).

Caption style

You can choose the Font (Size, Color, etc), Background and other Characteristics of the Closed Captions Text.

3 Use ▲▼ to Select **Caption style**, then press **OK**.
4 Use ▲▼ to Select **User setting**, then press **OK**.
5 Use ▲▼ to Select **On**, then press **OK**.
6 Use ▲▼ to Select an Item and press **OK**, then use ▲▼ to select the Desired Setting and press **OK**.

Note(s)

- Closed Captions Service may not be controlled by this Unit's Menu options if you are watching television through an External Cable or Satellite Set-top Box. In which case you will need to use the Menu options on the External Set-top Box to control Closed Captions.
- The Captions do not always use correct Spelling and Grammar. Not all TV Programs and product Commercials include Closed Captions information. Refer to your area TV Program Listings for the TV Channels and times of Closed Captions shows. The Closed Captions Programs are usually noted in the TV Listings with a Service Mark such as **CC**.
- Not all Closed Captions Services are used by a TV Broadcaster during the Transmission of a Closed Caption Program.
- The EUT setting that satisfies § 79.102 (e) is as follows:
  - Font: Mono-font
  - Character Size: Large

Child and Ratings Lock

You can prevent your children from watching certain Programs or certain Channels by locking the TV Controls and by using Ratings.

1 Press ⌂ and use ▲▼ to select **Features**, then press **OK**.
2 Use ▲▼ to select **Child lock**, then press **OK**.
3 Use **the NUMBER keys** to enter the 4-digit numbers for your PIN code.
  - When you have not set up your PIN code, enter **0, 0, 0, 0**.
  - When the PIN code is correct, **Child lock** menu is displayed.

Channel lock

Particular Channels or External Input modes can be invisible in this function.

4 Use ▲▼ to Select **Channel lock**, then press **OK**.
5 Use ▲▼ to Select the Particular Channels or External Input, then press **OK** Repeatedly to Switch between Block and View.
  - ☒ indicates that the Channel or Input Source is Locked (Block).
  - ☐ indicates that the Channel or Input Source is Not Locked (View).

Setting US Movie and TV Ratings

US Movie Ratings Lock is the Rating System created by MPAA.
US TV Ratings Lock has Controlled Access to Individual Programs based on their Age and Content rating.

4 Use ▲▼ to Select **US movie ratings lock** or **US TV ratings lock**, then press **OK**.
5 Use ▲▼ to Select the Desired Rating, then press **OK** Repeatedly to Switch between Block and View.
  - For US TV Ratings, you can further set the Sub Ratings to Block Specific Elements within Programs.
  - ☒ or ☑ indicates that the Rating is Locked.
  - ☐ indicates that the Rating is Not Locked (View).

US Movie ratings	US TV ratings	Description
All		All Ratings Locked including No Rating
NR	None	No Rating
–	TV-Y	Appropriate for All Children
–	TV-Y7	Appropriate for All Children 7 and Older
G	TV-G	General Audience
PG	TV-PG	Parental Guidance Suggested
PG-13	–	Unsuitable for children under 13
–	TV-14	Unsuitable for children under 14
R	–	Restricted under 17 Requires Accompanying Parent or Adult Guardian
NC-17	–	No One under 17 Admitted
X	TV-MA	Mature Audience Only

Canadian English or Canadian French Ratings

You can select the Rating for Canadian English or Canadian French broadcasting.

4 Use ▲▼ to Select **Canadian English rating** or **Canadian French rating**, then press **OK**.
5 Use ▲▼ to Select the Desired Rating, then press **OK** Repeatedly to Switch between Block and View.
  - ☒ indicates that the Rating is Locked (Block).
  - ☐ indicates that the Rating is Not Locked (View).

English

Continued on next page.

Canadian English rating	Canadian French rating	Description
All		Locked All Ratings
E		Exempt Program
C	–	For All Children
C8+	–	For All Children 8 and Older
G		General Audience
–	8ans+	Unsuitable for Ages under 8
PG	–	Parental Guidance Suggested
–	13ans+	Unsuitable for Ages under 13
14+	–	Unsuitable for Ages under 14
–	16ans+	Unsuitable for Ages under 16
18+	18ans+	Adult Audience Only

Note(s)

- The V-Chip can Block Non Rated Programs as per "CEA-608-E sec. L.3". If the Option to Block **NR**, **None** or **E** Programs are used in **US movie ratings lock**, **US TV ratings lock**, **Canadian English rating** or **Canadian French rating** accordingly "unusual results may occur and the Unit may not Receive Emergency Bulletins or other Types of Programming": / Emergency Bulletins (Such as EAS messages, Weather Warnings and Others) / Locally originated Programming / News / Political / Public Service Announcements / Religious / Sports / Weather.

Setting your Location to Home

You can set the **Location** of your TV to **Home** or **Retail**. Choosing **Home** gives you full flexibility to change predefined settings for Picture and Sound.

1 Press ⌂ and use ▲▼ to select **Features**, then press **OK**.

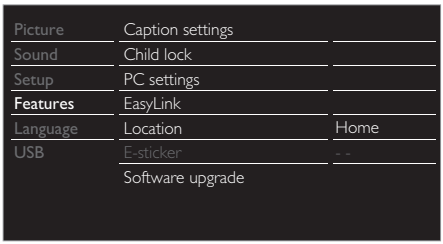

2 Use ▲▼ to Select **Location**, then press **OK**.

3 Use ▲▼ to Select **Home**, then press **OK**.

Note(s)

- You must set **Home** in the Menu. Otherwise, personalized Picture and Sound Settings will Not Be Memorized after the Unit goes into Standby Mode.

Viewing Photos and Videos on a USB Memory Stick

Your TV is fitted with a USB connection that enables you to view Photos or Videos (Motion JPEG files) stored on a USB Memory Stick.

1 Press ⌂ and use ▲▼ to select **USB**, then press **OK**.

- The Highlighted Text will move to **Start now**, then press **OK** again.

2 Use ▲▼ to Select the **Picture** or **Video**, then press **OK**.

- These Recorded Files must meet Specifications shown below:

Picture (JPEG)	Upper limit	24M pixel	
Video (Motion JPEG)	Size	320 x 240 (QVGA)	
	Frame rate	30fps	
	Audio type	LPCM	Sampling frequency (32 kHz, 44.1 kHz or 48 kHz) Quantization bit rate (16 bit)

Note(s)

- We cannot be held responsible if your USB Memory Stick is Not Supported, nor will we accept any liability for damage or loss of stored data.
- The USB Memory Stick is Not Supplied with this TV.
- A file name exceeding 128 characters or contains a dot character is Not Supported on this TV.
- Progressive JPEG files are Not Supported.
- Only a Motion JPEG file with an ".avi" extension is supported. An extension ".mov" is Not Supported.
- During Motion JPEG Playback, "Pause", "Forward" and "Reverse" Do Not Work on this Unit.

5 Install Channels

Autoprogram

Be sure the RF cable is correctly connected to this Unit and you are registered with your Cable TV provider when you Install Cable channels.

1 Press ⌂ and use ▲▼ to select **Setup**, then press **OK**.

2 Use ▲▼ to Select **Autoprogram**, then press **OK**.

- If you run **Autoprogram** when you have Locked Channels, a Message appears asking to enter your PIN. Enter your PIN in order to Complete the Installation. You need to set the Channel Lock again after the Installation.

3 Use ▲▼ to Select an appropriate Option, then press **OK**.

- When **Antenna** is selected, the TV Detects Any Off-the-Air Antenna Signals. It searches for ATSC (Digital) and NTSC (Analog) Channels available in your Area.
- When **Cable** is selected, the TV Detects Signals supplied by Cable. It searches for ATSC (Digital), NTSC (Analog) and Cable Channels available in your Area.

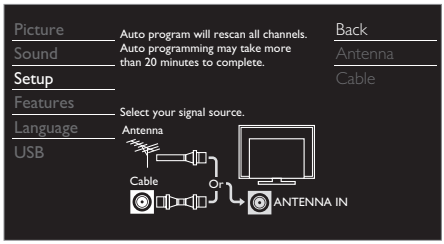

- When the Scanning and Memorizing of Available Channels is Completed, the Lowest Memorized Channel will be Displayed.

4 Follow the On-screen Instructions to Complete the Installation.

6 Troubleshooting

If the Unit does Not Perform Properly when Operated as Instructed in this Manual,
check the following Troubleshooting Tips and All Connections Once before calling for Service.

Power

No Power

- Make sure that the AC outlet supplies the proper voltage, plug another electrical appliance into the AC outlet to ensure that the AC outlet operates normally.
- If a Power Failure occurs, Unplug the AC Power Cord for 1 minute to allow the Unit to Reset Itself.

Remote

Remote Control keys or Remote itself does Not Work.

- Do NOT press more than one key at the same time.
- Ensure that no keys on the Remote Control are depressed and move freely.
- Re-insert the Batteries with their Polarities (+/–) as indicated.
- When there is an Infrared-equipped device near this Unit, it may interrupt the Remote Control Signal from this Unit.
- Make sure that Nothing is Blocking the Unit's Remote Control Sensor and the Remote Control is Pointed at this Remote Control Sensor.
- Press and Hold any Key on Remote Control toward a Digital or Cell Phone Camera. The Remote Control is working if you confirm a Flashing Infrared Light through the Camera. Some Dual Camera Cell Phones may have an IR Filter in one of the Cameras.

Universal Remote Control does not work properly.

- Refer to the User Manual of the Universal Remote Control for the Philips code.

Picture

Power is On but No Screen Image.

- Check whether the Connection for the Antenna, Cable or Satellite Set-top Box is Connected Correctly.
- Check whether All the Cables to the Unit are connected to the correct Output Jack on your separate Device like Blu-ray Disc / DVD Recorder.
- Make sure that the selected Input mode is connected to the working Input jack.
- Check if your computer is NOT in Sleep Mode when the Input Mode on this Unit is in PC mode. Tap any Key on the Computer Keyboard to Wake it up.

No Color

- Adjust **Color** in **Picture** settings. ➟ **p. 7**

Picture Poor, Sound OK

- Electrical Interference from nearby appliances may affect Picture Quality.
- Adjust **Contrast** and **Brightness** in **Picture** Settings. ➟ **p. 7**
- For the Best Picture Quality, watch "High Definition" wide screen Programs. If the HD content is Not available, watch "Standard Definition" Programs instead.

You see Noise or Trash on the Screen.

- When the capabilities on the Unit exceed the capabilities of the Digital Broadcasting, the signal will be increased to match the capabilities of the Display on the Unit. This may cause Noise or Trash.

Unusual picture appears and the TV does Not Operate.

- Press the Power Key first. If it Does Not Solve the Problem, then Press the Keys on the Remote Control in the Order shown below to change the Unit to the Live Mode.
  SLEEP ➟ **FORMAT** ➟ ▶ ➟ ▲ ➟ ▼ ➟ ⏻

Sound

No Sound, Distorted Sound or Incorrect Audio Sound is heard when using the HDMI-DVI connections.

- Make sure that the Analog Audio signals from the HDMI-DVI device are connected to the Analog Audio Input L/R jacks.
- When using Component Analog Video, Composite Analog Video or PC VGA Video make sure that the Analog Audio (L/R) connectors are Mounted into the Audio (L/R) Input jacks.

Sound Poor, Picture OK

- Check if the Audio Cable is connected into the Unit correctly.

You Switch to a Different Input and the Volume Changes.

- This Unit will Memorize the Volume Level from the last time you adjusted it.
- If the Volume of the Sound from another Device is Higher or Lower, then the Loudness will Change.
- Make sure **Auto volume leveling** is set to On. ➟ **p. 8**

Picture & Sound

No Picture or Sound

- View other TV channels. The problem might be limited to the Broadcasting Station or Weak Signal Strength.
- Unplug the AC Power Cord and wait for about 1 minute, then Plug the AC Power Cord and turn On the Unit again.
- Autoprogram must be completed when you Set Up the Unit for the First time or Move it to a location where previously unavailable channels are broadcast.
- The selected Channel cannot be viewed by the **Child and Ratings Lock** Setting. ➟ **p. 9**
- The Unit requires some kind of Input Signal. A Digital Indoor Antenna (VHF / UHF), a Digital External Antenna (VHF / UHF) or an RF coaxial cable from your Wall or Cable/Satellite Set-top Box signal (HDMI, Component+Audio or Composite [Video+Audio]) needs to be connected to the Unit.

Adjusted Picture or Sound settings are not effective every time the Unit is turned On.

- You must set to **Home** in **Location**. ➟ **p. 10** (Otherwise, the Settings you adjusted will not be memorized after the Unit goes into Standby Mode.)

You see a Distorted Picture or Hear an Unusual Sound.

- You may be getting NTSC (Analog) TV signal (not HDTV signal) interference from electrical appliances, automobiles, motorcycles or fluorescent lights.
- Try moving the Unit to another Location to see if this is the Cause of the Problem.

Ghosts, lines or streaks in picture. (Analog TV- NTSC signal)

- Electrical interference from nearby appliances may affect Picture Quality.

Child and Rating Lock

PIN code does not work.

- If a power failure occurs for longer than 10 seconds the child lock setting is retained, but the PIN code is set to the default code 0000. Refer to **Child and Ratings Lock**. ➟ **p. 9**

Screen

You Switch to a different Input and the Screen Size changes.

- This Unit will Memorize the Viewing Mode from the last time you used those Particular Input Modes.

The Display image does not cover the Entire Screen.

- If you are using the Unit as a PC Monitor, make sure that **Horizontal position** and **Vertical position** in **PC settings** are set correctly.
- If you are watching TV or using the Composite Video, Component Video or HDMI with 480i Input, press **FORMAT** repeatedly to Switch to various Screen Modes.

Closed Captions

Closed Captions are displayed as a white box. No Closed Captions are displayed in the Closed Captions-Supported Program.

- Interference from buildings or weather conditions may cause Closed Captions to be incomplete if watching Analog TV signals.
- Broadcasting Station may shorten the program to insert advertisements.
- The Closed Captions Decoder cannot read the information of a shortened program.
- Closed Captions that are delayed a few seconds behind the actual dialog are common for Live broadcasts. Most captioning production companies can display a dialog to maximum of 220 words per minute. If a dialog exceeds that rate, selective editing is used to insure that the Closed Captions remain up-to date with the current TV screen dialog.

Black Box is displayed on the TV Screen.

- The Text mode is selected. For Closed Captions, select **CC-1**, **CC-2**, **CC-3** or **CC-4**. ➟ **p. 9**

Note(s)

- The LCD screen is manufactured to provide many years of useful life. Occasionally a few non active pixels may appear as a fixed point of blue, green or red.
  This is Not to be considered a Defect in the LCD screen.
- Some Functions are not available in Specific Modes, but this is Not a Malfunction. Read the Description in this Manual for more Details on Correct Operations.

English

7 Specifications

Model #	55PFL4709	50PFL4709	49PFL4709	40PFL4709	40PFL4409	32PFL4509	28PFL4509
Picture							
Type	FHD (1920 x 1080 pixels 60Hz)					WXGA (1366 x 768 pixels 60Hz)	
Diagonal Screen Size / Aspect Ratio	54.6" / 16:9	49.5" / 16:9	48.5" / 16:9	40.0" / 16:9	39.5" / 16:9	31.5" / 16:9	27.5" / 16:9
Viewing Angles	178° (V) by 178° (H)	176° (V) by 176° (H)	178° (V) by 178° (H)		176° (V) by 176° (H)	178° (V) by 178° (H)	
Built-in Digital / Analog Tuner	ATSC (Digital) / NTSC (Analog)						
Sound							
Mono / Stereo	Mono, Stereo, DTS TruSurround™						
Power Output (RMS watts)	10W x 2			8 W x 2			
Equalizer	5 Band						
Ease of Use							
Picture Format	**SD (4:3 Source)** : Normal / 16:9 / Movie expand / Zoom / Wide **HD (16:9 Source)** : Normal / 4:3 / Movie expand / Zoom / Wide **HDMI AV (4:3 Source)** : Normal / 16:9 / Movie expand / Zoom / Wide / Full **HDMI AV (16:9 Source)** : Normal / 4:3 / Movie expand / Zoom / Wide / Full **PC Source** : Normal / Full / Unscaled (Refer to HDMI AV (16:9 Source) above if PC has HDMI Output.)						
Photo Slide Show	JPEG files only						
Video Playback	Only Motion JPEG 320 x 240, 30 fps with file extension "avi" will Playback.						
Channel							
Channel Coverage	**Terrestrial DTV (ATSC)** : VHF: 2~13 UHF: 14~69 (Each Channel has e.g. 2.1~2.9, 3.1~3.9, etc) **Terrestrial Analog (NTSC)** : VHF: 2~13 UHF: 14~69						
CATV (Analog NTSC)	2~13, A~W W+1~W+94 (Analog W+1~W+84), A-5~A-1, 5A						
Tuning System	Channel Frequency Synthesized Tuning System						
Channel Access	Direct Access Number Keyboard, Programmable Scan, Channel +(up) / −(down) and PREV. CH (Previous Channel)						
Connectivity							
Component Video Input (Y/Pb/Pr)	1 Supporting video signals : 480i/p, 720p, 1080i/p @60Hz						
Composite Video Input (Shared Y Green Terminal with Component Video)	1						
HDMI Input	3 Supporting video signals : 480i/p, 720p, 1080i @60Hz, 1080p @24/30/60Hz						
	PC-Input Signal up to FHD (1920 x 1080)					PC-Input Signal up to WXGA (1360 x 768)	
Analog Audio L/R Input	1						
PC Input	via VGA, HDMI and HDMI-DVI + Analog Audio L/R						
USB	1						
Digital Audio Output	1 Supporting Dolby Digital						
Headphone Output	1 1/8 inch (3.5mm)						
Power							
Power Requirements	120V~ +/− 10%, 50/60Hz +/− 0.5%						
Temperature							
Operating Temperature	41 °F (5 °C) to 104 °F (40 °C)						

• Specifications are Subject to Change without Prior Notice.

8 Garantía

POLIZA DE GARANTÍA

ESTA POLIZA ES GRATUITA

Este aparato ha sido cuidadosamente diseñado y se ha fabricado con los mejores materiales bajo un estricto control de calidad, garantizando su buen funcionamiento por los periodos establecidos según el aparato (ver lista en la parte inferior) **a partir de la entrega del aparato al consumidor.**

Esta póliza incluye la reparación o reposición gratuita de cualquier parte o componente que eventualmente fallase y la mano de obra necesaria para su reparación, así como los gastos de transportación razonablemente erogados dentro de nuestros centros de servicio, misma que se hará efectiva en cualquiera de nuestros centros de servicio autorizados en el país.

Si su aparato llegase a requerir de nuestro servicio de garantía, acuda al centro de servicio más cercano a su domicilio, de tener alguna duda por favor llame a nuestro CENTRO DE INFORMACIÓN AL CLIENTE LADA sin costo en toda la republica al **01 800 839 19 89** en donde con gusto le indicaremos el centro de servicio autorizado más cercano a su domicilio.

P&F MEXICANA S.A. de C.V. a través de sus centros de servicio autorizados **reparará y devolverá a usted su aparato en un plazo no mayor a 20 días hábiles**, contados a partir de la fecha de ingreso, impresa en la orden de servicio de cualquiera de nuestros centros de servicio autorizados.

La garantía de esta póliza cubre cualquier desperfecto o daño eventualmente ocasionado por los trabajos de reparación y/o traslado del aparato en el interior de nuestros centros de servicio autorizados.

Esta póliza sólo tendrá validez, si está debidamente requisitada, sellada por la casa vendedora, en caso de extravío de esta póliza, podrá hacer efectiva su garantía con la presentación de su factura de compra.

ESTA POLIZA NO SE HARA EFECTIVA EN LOS SIGUIENTES CASOS:

-Cuando el aparato sea utilizado en condiciones distintas a las normales.

-Cuando el aparato no haya sido operado de acuerdo con el instructivo de uso que se le acompaña.

-Cuando la causa de la falla o mal funcionamiento sea consecuencia de una reparación inadecuada o alteración producida por personas no autorizadas por P&F MEXICANA S.A. de C.V.

PERIODOS DE GARANTÍA

12 meses.- Televisores con y sin reproductor de video digital DVD, reproductores de discos de video digital DVD, reproductores de disco de video digital BLUE-RAY, grabadores reproductores de discos de video digital DVD, sistemas de cine en casa, radiograbadoras con y sin reproductor de disco compacto, video proyector (excepto la lámpara), mini sistemas de audio, equipos modulares, antenas de recepción de satélite, teléfonos, teléfonos inalámbricos, auto estéreos, tabletas electrónicas, Base para Ipod y bocinas inalámbricas (bluetooth).

6 meses.- Radio relojes, radios A.M. /F.M, batería recargables y reproductores de audio digital MP3 (internet).

24 meses.- Televisores Hoteleros LCD y ITV.

90 días.- Accesorios, controles remotos, bocinas, micrófonos, audífonos y aparatos reconstruidos de LCD TV, DVD, Blue-Ray, Barras de audio y Sistemas de Teatro en casa.

PHILIPS

MC - 719 - ARCO - 2

P&F MEXICANA, S.A. de C.V.

Producto Importado y Comercializado por:
P&F Mexicana, S.A. de C.V.
Av. La Palma No. 6, Col. San Fernando La Herradura.
Huixquilucan, Edo. de México. C.P. 52787
Tel: 52 (55) 52 69 90 00

Centro de Información al Cliente
México D.F. y Área Metropolitana; **58 87 97 36**
Interior de la Republica; **01 800 839 19 89**
Colombia; **01 800 952 0640**
Costa Rica; **0800 052 1564**
Guatemala; **1 800 835 0351**
El Salvador; **1 800 6141**
Honduras; **01 800 122 6276**
Panamá; **800 052 1372**
Venezuela; **01 800 100 5399**
Horario; Lunes a Sábado de 8:00 am a 8:00 pm
e-mail: serviciophilips@pnfmex.com

MODELO_____ No. DE SERIE_____
La presente garantía contará a partir de: DÍA_____ MES_____ AÑO_____
En caso que en su producto presente alguna falla, acuda al centro de servicio más cercano a su domicilio (según listado de talleres anexo)
y en caso de tener alguna duda o pregunta por favor llame a nuestro **Centro de información al Cliente**, en donde con gusto le atenderemos en todo lo relativo a:

- Servicio de sus aparatos Philips
- Asesoría en el manejo e instalación de su producto Philips
- Información de productos y Talleres Autorizados Philips
- Información en donde puede adquirir productos y accesorios Philips

Para hacer efectiva la garantía de su producto, es necesario presentar esta póliza debidamente requisitada o de lo contrario, presentar su factura de compra.

CENTROS DE SERVICIO AUTORIZADOS PHILIPS EN LAS PRINCIPALES CIUDADES

CIUDAD	LADA	TELÉFONO	CORREO ELECTRÓNICO
ACAPULCO, GRO	744	483-32-96	serproa@yahoo.com.mx
AGUASCALIENTES, AGS	449	915-51-81	jimsaele@hotmail.com
CAMPECHE. CAMP.	981	816 25 75	oreza@hotmail.com
CANCÚN, Q ROO.	998	984 18 74	gammacancun@webtelmex.net.mx
CD. JUÁREZ, CHIH	656	618-21-28 • 623-46-20	teleservicio@prodigy.net.mx
CD. OBREGÓN, SON	644	412-41-51 • 416-20-93	mena747@prodigy.net.mx
CD.VICTORIA, TAMPS	834	315-66-03 • 312-51-93	eeii_smiller@yahoo.com.mx
CUERNAVACA, MOR	777	313-00-49 • 313-90-92	centroserviciohertz@hotmail.com
LOS MOCHIS,SIN	668	8173099	electronica_morelos@hotmail.com
CULIACÁN, SIN	667	716-15-10	stereovox@cln.megared.net.mx
CHIHUAHUA, CHIH	614	415-04-43 • 415-04-43	elecmiradoryahoo.com.mx
CHILPANCINGO, GRO.	747	471 72 73	ingelec_gro@hotmail.com
DURANGO, DGO	618	825-00-05	evsurdgo@yahoo.com
GUADALAJARA, JAL	33	36-15-72-62 • 36-16-83-27	leecom1@hotmail.com
HERMOSILLO, SON	662	210-54-95 • 210-05-86	manuelw@prodigy.net.mx
IRAPUATO, GTO	462	626-51-10	tv_gase@hotmail.com
LA PAZ, B.C.S	612	122-95-99	cenalfa@prodigy.net.mx
MAZATLÁN, SIN	669	982-42-21	e_santel@hotmail.com
MÉRIDA, YUC	999	928-59-05	evia2@prodigy.net.mx
PACHUCA, HGO	771	714-15-81	zarateelc@hotmail.com
TEPIC, NAY	311	212-66-93	spe_tn@hotmail.co
MÉXICO D.F. ZONA ARAGÓN	55	57 94 06 34	philipservicio@hotmail.com
MÉXICO, D. F. ZONA SUR	55	58 56 75 24 • 26 38 4532	serviciohg@prodigy.net.mx
MÉXICO, D. F. ZONA NORTE	55	53 68 30 21	tissaser@prodigy.net.mx
MÉXICO, D. F. ZONA NORTE	55	53711250	matriz@tecdata.com.mx
MÉXICO, D. F. ZONA ORIENTE	55	55 44 16 00	cselectromex@hotmail.com
MÉXICO, D. F. ZONA PONIENTE	55	58 12 44 12	serviciotv@prodigy.net.mx
MONTERREY, N.L	818	375-16-17 • 400-54-03	mcesa@prodigy.net.mx
MORELIA, MICH	443	312-03-17	multiservicios_profesionales_de_zamora@msn.com
NEZAHUALCOYOTL EDO. MEX	55	57-33-34-98	servalfa@yahoo.com.mx
OAXACA, OAX	951	516-47-37	elfrancistor@prodigy.net.mx
PUERTO ESCONDIDO, OAX	954	582 03 41	estere_electronica@prodigy.net.mx
ORIZABA,VER	272	724 38 53	barreda_electronics@hotmail.com
POZA RICA,VER	782	824 47 82	sonydigital@prodigy.net.mx
VERACRUZ,VER	229	932-78-23 • 932-44-44	antza@ver.megared.net.mx
PUEBLA, PUE	222	248-77-64 • 231-63-77	rascon12@prodigy.net.mx
QUERETARO, QRO	442	216-10-09	zenersaulphilips@yahoo.com.mx
SALTILLO, COAH	844	439 39 64	electronicadigital_07@hotmail.com
SAN LUIS POTOSI, S.L.P	444	815-34-07	centro_serviciosIp@prodigy.net.mx
TAMPICO,TAMPS	833	214 13 60	electromovie@prodigy.net.mx
MEXICALI, B.C.N	686	561-98-08 • 561-98-18	bajaelectronics@aol.com
TIJUANA, B.C.N	664	621-22-15	egi_tij@yahoo.com
TOLUCA, EDO. MEX	722	384 1920	radioytv@hotmail.com
TAPACHUAL,CHIS	962	62 69998	eaysdi@prodigy.net.mx
URUAPAN, MICH	452	524-08-38 • 524-37-78	rosaliaq@mich1.telmex.net.mx
VILLAHERMOSA, TAB	993	314-31-36 • 314-61-67	villatec@intrasur.net.mx

Para mayor referencia de Telleres de Servicio Autorizados en otras ciudades comunicarse Ciudad de México y Área Metropolitana llamar al **58 87 97 36** y lada sin costo del interior de la Republica Mexicana **01 800 839 19 89**; Este listado puede sufrir actualizaciones o modificaciones sin previo aviso, para mayor información favor de comunicarse al Centro de Información al Cliente.

P&F Mexicana, S.A. de C.V.
Av. La Palma No. 6, Col. San Fernando La Herradura.
Huixquilucan, Edo. de México. C.P. 52787

TELEVISOR A COLOR DE CRISTAL LIQUIDO (LCD)

MODELO	LCD	IMAGEN VISIBLE	ENERGIA
55PFL4709/F8	55'' (139,70cm)	138.78cm	120V ~ 50 / 60Hz 150W
50PFL4709/F8	50'' (127,00cm)	125,73cm	120V ~ 50 / 60Hz 145W
49PFL4709/F8	49'' (124,46cm)	123,20cm	120V ~ 50 / 60Hz 145W
40PFL4709/F8	40'' (101,60cm)	101,61cm	120V ~ 50 / 60Hz 89W
40PFL4409/F8	40'' (101,60cm)	100,33cm	120V ~ 50 / 60Hz 89W
32PFL4509/F8	32'' (81,28cm)	80,04cm	120V ~ 50 / 60Hz 50W
28PFL4509/F8	28'' (71,12cm)	69,87cm	120V ~ 50 / 60Hz 42W

Comercializado por : P&F MEXICANA, S.A. DE C.V.

IMPORTADOR : P&F MEXICANA, S.A. DE C.V.
Av. La Palma No. 6, Col. San Fernando La Herradura. Huixquilucan,
Edo. de México. C.P. 52787 Tel: 52 55 52 69 9000

EXPORTADOR : FUNAI ELECTRIC CO., LTD.

HECHO EN : MÉXICO

GARANTIA INCLUIDA EN EL INSTRUCTIVO DE USO

NOM- NYCE

LEA CUIDADOSAMENTE ESTE INSTRUCTIVO
ANTES DE USAR SU APARATO.

Philips and Philips Shield are used under license of
Koninklijke Philips N.V.

Printed in Thailand
A4GPAMA / A4G2EMA / A4GFCMA / A4GSAMA
2EMN00166A ★★★★

2EMN00166A